

PUREJOIN

T. 678.206.0500 W. HTTP://MERCHANT.PUREJOIN.COM

CATEGORY

POS Godex DT4X

GODEX DT4X PRINTER SETUP

- Connect ethernet cable and power to Godex DT4X
 printer
- Download driver and install <u>https://www.seagullscientific.com/downloads/printer-drivers/godex-dt4x/</u>
- Goto Control panel (search from your windows computer)
- Open Devices and printers
- Right Click on Godex DT4X printer and choose "printing preference"

Page Setup	Graphics	Stock	Options	About	
Stock					
<u>N</u> ame:	4 x 6 (4.00	in x 6.00) in)		~
	New		Ec	lit	Delete

• Click Edit and change it to 2 x 1

Stock				Preview	
Name:	USER		<u> 1</u>		
Туре:	Die-Cut Label	s	~		
Label Si	ze		50		
Width:	2.00 in	Height:	1.00 in		
Expose	d Liner Widths				
	0.05 :	Dista	0.05 %		

- Click OK and save
- Download and install GoUtility



PUREJOIN

PROFESSION OR INDUSTRY | LINK TO OTHER ONLINE PROPERTIES: PORTFOLIO/WEBSITE/BLOG

- https://www.godexintl.com/product/15820156824815981?1
 ocale=en
- Click Search

	₽ s	earch Printer							
		AliasName	IP	Port	MAC	Model	FW Version	Status	
	1	DT4xW	192.168.38.211	9100	00-1D-9A-07-5D-4C	DT4xW	V2.00A (Aug 19 2019)	00	
•	2	DT4xW	192.168.38.90	9100	00-1D-9A-08-40-12	DT4xW	V2.100 (May 07 2020)	00	

• Get the IP address and enter it to your Purejoin Inventory App









2

Change IP Address to Static

1. Enter your GODEX printer IP address on the Address/ Search bar.

For example: 192.168.38.211 – hit Enter.

2. Login with your default account.

Account: admin

Password: 1111

★ Login	× +				∨ – □ X
← → C ▲ Not secu	re 192.168.38.211/index.htm Ty	pe your printer IP address here	🕶 🖻 🛧 🔲 🚯 🗄		
		Please Input	t Login Account		
		Account	admin	Default login account	
		Password		Account: admin Password: 1111	
		Login	Cancel		

- 3. Select Configuration > TCP/IP. Now, TCP/IP Configuration Setting showing.
- 4. Select Static IP. Then, enter your static IP Address.
- 5. Hit Submit.

★ Printer Web Server × +		∨ – □ X
← → C ▲ Not secure 192.168.38.211/login.cgi		아 🖻 🖈 🗖 🚯 🗄
Barcod	es Made Easy English Deutsch	
	Logout	
Configur TCP/IP Printer C Alert Me SNMP SMTP Mainten Printer C	ation TCP/IP Configuration Setting TCP/IP Configuration Setting Set Administrator New Administrator New Administrator New Password Max 15 letters Retype Password Max 15 letters Alias Name	
Diagnosi	s Alias Name DT4xW Max 16 letters	
Alert Me	ssage share the source of the start of the s	
Support	IP Setting	
Support	TCP Port 9100	
	© Get IP From DHCP Server Automatically ● Static IP IP Address 192.168.38.211 Subnet Mask 255.255.250 Standard Gateway 192.168.38.1 DNS IP 192.168.38.1 DNS Domain Name Submit Reset	

Your GODEX printer is now set up with static IP Address.